

Handheld Confetti/Streamer Launcher

Duty of Care & Instructions



PLEASE READ CAREFULLY: IF CONFETTI/STREAMER LAUNCHER MISFIRES DUE TO NEGLIGENCE, MISUSE OR ABUSE, NO REFUND SHALL APPLY AND KABOOM CONFETTI ACCEPTS NO RESPONSIBILITY.

To fire hand held launcher(s)

1. Break top seal of tube by removing sticker so that total payload can launch unrestricted.
 2. Hold the top section of the launcher tightly and steadily.
 3. Ensure the directional arrow is pointing away from your face and body.
 4. Aim as high over audience's head as possible without possible impact on the ceiling. Minimum aiming clearance above audience heads is 1 metre in the direction of the confetti launch.
 5. Use your dominate hand to twist the bottom section of the launcher.
- Note: Keep launcher away from your body as there may be some recoil when launcher operates.

Points of Attention

1. Never point the launcher at persons, animals, objects or powerlines.
2. Be aware of persons around you at all times.
3. Do not store near source of heat or in a direct sunlight for prolonged periods of time.
4. Do not throw, puncture or incinerate the launcher as it contains a pressurised vessel.
5. This is NOT A TOY and must be handled by responsible persons at all times.
6. Do not aim towards any fragile items such as light fixtures and chandeliers.
7. After launching please dispose of thoughtfully.
8. All contents are flame retardant.
9. Contents are water resistant, not waterproof - colours may run.
10. If launcher fails to operate after following the instructions above do not discard - contact Kaboom Confetti for advice.
11. Launchers are powered by Nitrogen and can be transported under UN3164. **DO NOT** transport by air.
12. If cannon fails to operate after the above instructions. **DO NOT** discard - contact Kaboom Confetti for advice.

This duty of care / instructions are provided by Kaboom Confetti, by operating provided equipment you acknowledge that you have been provided with written instruction, have read and fully understand contained information, you accept that the responsibility to install and operate this equipment safely under circumstances and conditions existing at the intended time of operation falls with you. The below table represents approximate firing distances. Actual range will vary depending on choice of fill, inside/outside location and prevailing wind and weather conditions.

Launcher Size	Approximate Distance	
	Low Pressure	High Pressure
30cm (50gram)	3-5m approx.	4-6m approx.
50cm (100gram)	6-8m approx.	8-10m approx.
80cm (200gram)	8-10m approx.	10-12m approx.

www.kaboomconfetti.com.au
warehouse 2/50 Barrie Road Tullamarine VIC 3043
Anthony: 0409 236 205 or Ros 0418 339 607
Star Decor Group Pty Ltd trading as Kaboom Confetti
ABN 53 414 310 824